

# SUPPO™ Speed Controller Programming Instructions

## For Advance programmable Normal Boat ESC

### 70A/125A/200A ESC (No BEC)

### 70A+UBEC/125A+UBEC/200A+UBEC



 



**Important Note:** some of these ESCs are **Opto, without BEC**, you need extra power source like a UBEC, a voltage regulator, or extra batteries as the power source for your receiver. If you hear the music tone repeat again and again for more than 3 times, you may need to check your power source to the receiver.

#### • Phrases 1 Enter programming Mode

1. Connect your motor and receiver to the speed controller, but do not connect the battery yet.
2. Turn on your transmitter and move the throttle stick to the full throttle position (full up).  
Please Note: Most Futaba transmitters have the throttle channel reversed by default.
3. Connect your battery and the controller will initialize with a musical tone.

#### • Phrases 2 Programming

After 3 seconds, the motor will start a musical tone followed by one or more beeps. Each sequence represents a parameter that you can program and is repeated 3 times. The parameters are:

	Music Tone + 1 Beep	Options 1. Cell Type and No. of Cells
	Music Tone + 2 Beeps	Options 2. Throttle Setting
	Music Tone + 3 Beeps	Options 3. Reverse power setting
	Music Tone + 4 Beeps	Options 4. Direction and Cutoff Type
	Music Tone + 5 Beeps	Options 5. Timing Mode
	Music Tone + 6 Beeps	Option 6. PWM setting

**Step 1. Starting, Enter Sub-options.** When you hear the sequence for the parameter you wish to program, move the throttle stick to the **Center Position to Enter Sub-options**.

The controller will then **start beeping a Morse code sequence** of short and long beeps representing the possible options you may choose for the selected parameter. See table 2 for a list of all programmable options. Each option sequence is repeated 3 times.

**Step 2. Select and save,** the select the option, move the **throttle stick back to the Full-up-position.**, When you hear the sequence for the option you wish to select. The controller will then save the selected option, and **sound a long beep as a confirmation**. It then goes back to the beginning of the programming sequence (phrases 2).

**Step 3. Complete and exit programming.** Setup all the parameters you need to change. When complete,

move the throttle stick to the **Lowest (Down) Position**. The controller will save all options and re-initialize in normal running mode so you can start your motor.

The table below summarizes the various programming options for each parameter:

Option 1.1 Cell Type and Number of Cells ♪—	Only for 50A/70A/ 125A-LV / 200A-LV (LV as 2S-7S)
• — 1 Short + 1 Long	NiMh/NiCD Auto Cell Count - 0.8V/Cell Cutoff Voltage (70% of start voltage)
• — — 1 Short + 2 Long.	7S Li-Po (25.9V) - 21V Cutoff Voltage **
• — — — 1 Short + 3 Long	6S Li-Po (22.2V) - 18V Cutoff Voltage
• — — — — 1 Short + 4 Long	5S Li-Po (18.5V) - 15V Cutoff Voltage
• — — — — — 1 Short + 5 Long	4S Li-Po (14.8V) - 12V Cutoff Voltage
• — — — — — — 1 Short + 6 Long	3S Li-Po (11.1V) - 9V Cutoff Voltage
• — — — — — — — 1 Short + 7 Long	2S Li-Po (7.4V) - 8V Cutoff Voltage

Option 2. Throttle Setting ♪— —	
•• — 2 Short + 1 Long	Auto Throttle Range *
•• — — 2 Short + 2 Long	fixed 1.1ms to 1.8ms throttle range
•• — — — 2 Short + 3 Long	Hard Acc*
•• — — — — 2 Short + 4 Long	Soft Acc

Option 3. Reverse Setting ♪— — — —	
••• — 3 Short + 1 Long	No Reverse
••• — — 3 Short + 2 Long	25% power Reverse*
••• — — — 3 Short + 3 Long	50% power Reverse
••• — — — — 3 Short + 4 Long	100% power Reverse

Option 4. Direction and Cutoff Type ♪— — — —	
•••• — 4 Short + 1 Long	Clockwise Rotation *
•••• — — 4 Short + 2 Long	Counterclockwise Rotation
•••• — — — 4 Short + 3 Long	Soft Cutoff*
•••• — — — — 4 Short + 4 Long	Hard Cutoff

Option 5. Timing Mode Setting ♪— — — — —	
••••• — 5 Short + 1 Long	1° - For 2-4 Pole Inrunner Motors *
••••• — — 5 Short + 2 Long	7° - For 6-8 Pole Motors
••••• — — — 5 Short + 3 Long	15° - For 10-14 Pole Outrunner Motors
••••• — — — — 5 Short + 4 Long	30° - For 10-14 Pole High-KV Motors

Option 6. ♪— — — — —	(PWM) Setting
•••••• — 6 Short + 1 Long 8KHz	- For low RPM and low pole count motors *
•••••• — — 6 Short + 2 Long 16KHz	- For most out runner motors

\* is Default Setting