



#### Instruction Manual of Changing Robot

## Battery information:

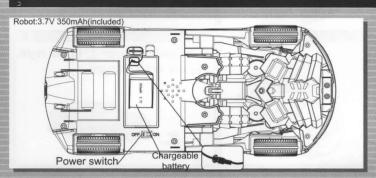

Battery loading on the Robot:

- 1.Please confirm if the power switch is on the OFF position.
- 2. Please unscrew the knob or Use the crossing screwdriver to open the battery cover.
- 3.Please connect the battery with the Robot as the picture shown.
- 4. Close the battery cover.

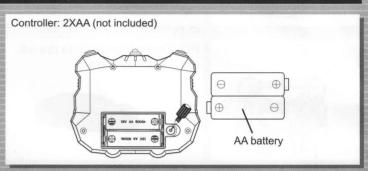


Battery loading for the controller:

- 1.Use a screwdriver to loosen the screws on the battery cover and open the battery cover.
- 2.Load 2PCS 1.5V AA batteries(AA battery) as per the correct "+""-"polarity shown in the battery compartment.
- 3. Close the battery cover, then tighten the screws.


# **Battery Caution**

- used for this toy.
- 2. How do you remove and replace the battery? Please unscrew the knob to open the battery cover, then load or remove the battery as per the correct polarity.
- 3. Non-chargeable battery is not to be charged.
- 4. Chargeable battery can only be charged under adult supervision.
- 5. Chargeable battery should be removed from this toy before charging.
- 1.Only chargeable battery and charger recommended can be 6.Only batteries of the same types or the recommended battery can be used.
  - 7. The maximum power connected can not be more than the quantity recommended.
  - 8. Batteries of different types or old batteries are not to be mixed with the new ones.
  - 9.Batteries are to be loaded as per the correct polarity.
  - 10. Exhausted batteries are to be removed from this toy.
  - 11. Power ends are not to be short-circuited.

#### Illustration on the function of the transmitter

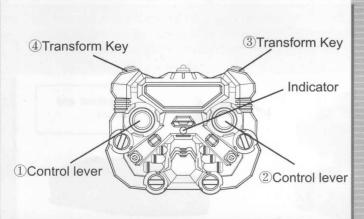

## Diagram on battery charging

 


Battery charging: 1. Please connect the battery with the charger as the arrow direction indicated.

- 2. Please insert the charger into the household power socket.
- 3. Charging time is dependent on the capacity of the battery. Usually charging time is about 1 hour. Play time is about 30 minutes.
- 4. Charger should be pulled out from the socket when finish charging. New battery should be used after being charged. When charging, the temperature on the surface of the battery or charger may rise. The battery surface or charger may be lukewarm when you feel them. Please DO NOT worry about this and please note that this is a normal phenomenon.

Please use the adapter of the output voltage 5V.

### Operating instruction

On the botton of the car, move the ON/OFF swith to the ON position to switch on the power, the car will beging to make realistc engine and horn sounds. You can use the control lever on the transmitter to control your car forward, backward, turn-left, turn-right.

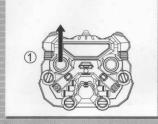


Pull Control Lever ① up, the car will move forward.



1


Pull Control Lever ① down, the car will move backward.



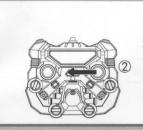

 Pull Control Lever ② to the left, the car will turn left.







Pull Control Lever ② to the right, the car will turn right.




If the car is left idle for some time, it will stop making sounds temporarily. When you operate it again, it will send out the sound again.

When the car is stopped, keep pressing ③ Transform Key tightly,and you will hear the dynamic music and tone of "I am powerful and I am the peace envoy of the earth ,let us go for battle for the earth peace", the car will turn slowly from the car into the almighty Robot .

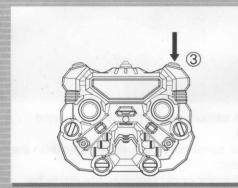


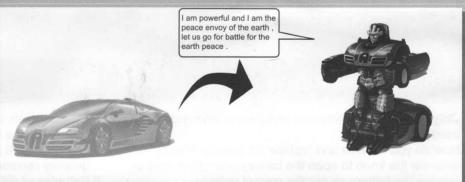

When the Robot is successfully transformed, you can use the Control Lever ① and ② on the transmitter to control the Robot to go forward / backward , turn left /turn right.

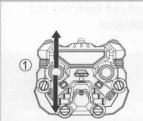

 Pull Control Lever ① up, the Robot will move forward.
Pull Control Lever ① down, the Robot will move backward.



Pull Control Lever ② to the left, the Robot will turn left.
Pull Control Lever ② to the right, the Robot will turn right.

If you need to change the Robot into the Car, simply press tightly the ④ Transform Key, with the music playing and the tone "Transform and roll out", the Robot will slowly be turned back into the Car. You can use the controller to control the car once again. (When there is insufficient power, the sound from this toy will become intermittent and inconsistent - please charge or replace the batteries.)

