



AGES 6+



MINI RACING

RADIO CONTROL SERIES

Instruction manual

ITEM NO.2018

Name of product:

1:64 MINI REMOTE CONTROL RACING

Product features:

LONGER TIME: 6 to 10 minutes (equipped with large-capacity battery, it can reach the best effect after charging and discharging several times.);

LONGER DISTANCE: 6 to 20 meters;



BETTER PERFORMAMNCE: reliable frequency seletion and strong anti-interference ability.

Preparation:

1. Rip the paster, and take up the cover with the arrowhead direction.





2. Press the unlock button, and then drag to the right, remove racing.

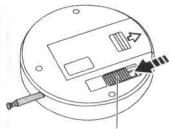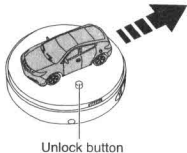

3. Will antenna lifting button boost up, can remove the antenna, shown in Figure.


4. Insert the antenna into the hole at the top of the controller, and tighten it.

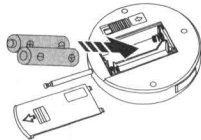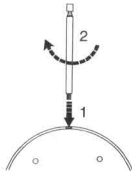

5. Push away the battery cover after the controller, install 2x "AA" batteries with the correct polarity, then replace the battery cover.


Charge:

Open remote control beside the charging cover and remove the charging plug. the battery charging attachment plug inserted into the vehicle bottom battery charging interface, battery charging guiding lights bright, indicate that battery charging is in progress.

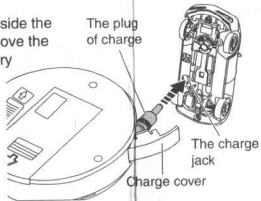


Operation:

1. Extend the transmitter's antenna for better signal reception. Move the ON/OFF switch on the mini racer to ON, and place it on the ground.

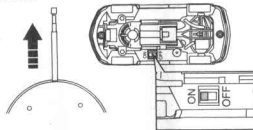


2. The transmitter is full-function:

 - (1) The FUNCTION INDICATOR lights up when any button on the transmitter is pressed.
- (2) The mini racer run forward and lights up its headlights when the transmitter's FORWARD button is pressed. The mini racer run reverse and lights up its tail lamps when the transmitter's REVERSE button is pressed.
- (3) Pressing the LEFT/RIGHT button on the transmitter while the mini racer is running forward or reverse, the mini racer will make left/right turns.
- (4) Unlock button: When play the racing, press the unlock button on the remote control, according to the method will racing remove.



 3. The DIRECTIONAL GUIDE is used to adjust the mini racer's direct-line-running-performance.



DIRECTIONAL GUIDE

CAUTION:

- a). Do not touch the antenna during operating, or the controlled distance may be affected;The antenna breaks to need adult is processing.
- b). This racing car has strong driving force,when it is high speed running that cannot suddenly stop as a result of the inertia,please use carefully.
- c). If the car becomes apparently slower during operation,it might due to insufficient power,please charge the car follow the illustration.
- d). The car should decelerate when turning rapidly or reversing, or the car may turn over.
- e). Replace the new batteries of the controller if they lack of power, the car can't be charge the indicator lamp turns dim.
- f). Pay attention to the plug of charge & the charge position when charging.
- g). When not in use for a long time, please ensure that car battery has more than 50% of electricity, and will power switch to "OFF", Remove the battery within the remote control.
- h). Body with built-in 2.4V(NI-MH) rechargeable battery, charging of the body, to be conducted under the guidance of an adult.
- i). Old and new batteries or different types of batteries are not to be mixed.
- j). Batteries are to be inserted with the correct polarity,,avoid install of mistake.
- k). Do not short circuit the batteries terminals.
- l). Remove the packing under adult supervision.
- m). Please retain the above information for future reference.