 


2.4G FIGHTING TANK instruction manual TS004

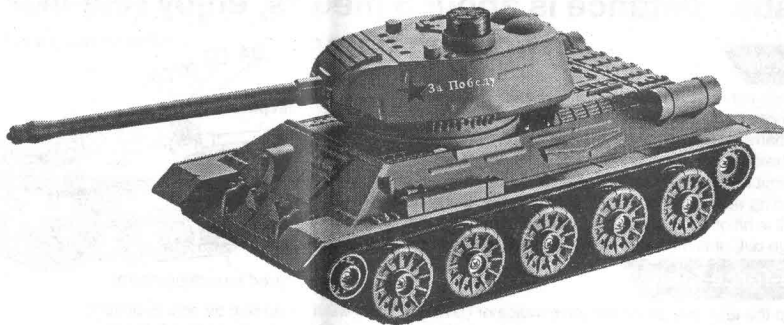

Thank you for your purchase of our product. To ensure safety, please read this instruction manual carefully before operating and keep it in a safe place for further reference.

Please buy 2 or more tanks, experience all-new real-like fighting game!

⚠ Caution:

- *Please follow the instruction for installing and operating, some parts are to be installed only by adults.
- *Please operate under parental guidance.
- *Keep small parts away from children as they might be swallowed and cause choking.
- *Please throw the wrapper in time to avoid danger for children.
- *Please regularly check the charger, wire, plug, body shell and other parts. If any damage is observed, do not use it until the damage is repaired.
- *Please DO NOT touch the rotating tank caterpillar.
- *Do not operate on the road or in crowded environment to avoid danger.
- *It is recommended to operate on flat and smooth surface for longer lifetime.
- *Please avoid humidity environment because it may cause electrical failure.
- *Please stop operating if you hear thunder or see lightning.
- *Please use appointed power source to charge the product.
- *Only use the attached charger to charge the battery.
- *Never short circuit the batteries, disassemble them or throw them into fire.
- *Exhausted toy model product and batteries are to be disposed as per the local law and regulation stipulated or to be delivered to the qualified recycling company for disposal.
- *For damaged batteries, please avoid touching it. In case the skin or clothes are stained, please rinse it with massive clean water.

- *This toy can only be connected to the safe equipment of class II electric appliance.
 - *Charger is not a toy. When cleaning, please disconnect this product from the charger first.
 - *laser radiation, do not look at the light beam directly.
 - *Do not point the antenna toward faces.
 - *The tank use 4.8V 400mAh Battery pack; The transmitter use "AA" X2 batteries (not included).
 - *Please load the batteries as the correct polarity shown when loading or replacing the batteries.
 - *Please recharge the batteries or change the batteries in time if the speed is getting slower.
 - *Non-rechargeable batteries are not to be recharged.
 - *Rechargeable batteries should only be charged under adult supervision.
 - *Always remove the rechargeable batteries from the battery box before charging.
 - *Do not mix different types of batteries or old and new batteries.
 - *Please remove exhausted batteries in time.
 - *Do not short-circuit the terminals.
- Warning Instruction on Radio Control model:**
- ① In order to meet the requirement of the electromagnetic environment of aviation radio control station (plant), transmitters for all kinds of models are FORBIDDEN to be used within the radius of 5000 meters taking the central point of the airport runway as the center. ② During the period or the area that the related department publishing the order for radio control regulation, please stop using the transmitter of this model.
- *This package and instruction manual contain important information; please well keep it for further reference.

Main parameters


Frequency: 2.4GHz
Control distance: about 10m
Fighting distance: about 3m

Type of batteries: 1. tank: 4.8V *400mAh battery pack
2. Transmitter 1.5V "AA" *2 (not included)
Voltage range: 4.0V < Tank < 6.5V, 2.4V < Transmitter < 3.2V

Points for attention

1. Do not play the tanks on street or among the crowd to avoid danger.
2. The tank might be damaged due to short circuit caused by playing it in the dirty water. And the tank may not work when it is subject to strong sunshine.
3. In order to extend the service life of the tank, it is recommended that you play the tank on flat and smooth surface or indoors.
4. During operating, if the tank becomes apparently slower, it might due to insufficient power, and the batteries should be replaced or recharged in time.
5. The non-rechargeable batteries shall not be recharged. When the batteries are recharged, there shall be adults to take care of it.
6. Neither mixed new and used batteries nor batteries of different types applied together. The connection terminals of the battery shall not be short circuited.

Name of each parts

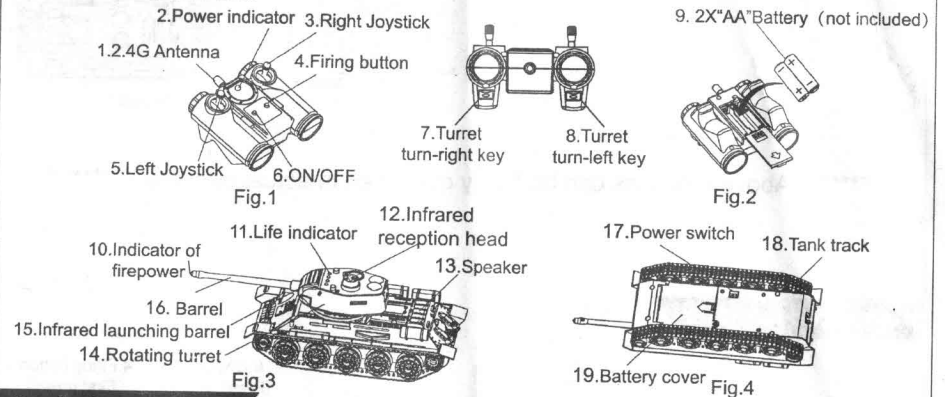

Operating method

1. As shown in fig. 2: Open the battery lid of the remote control above, put 2X "AA" batteries into the box complying with polarity requirements, close battery box.
2. As shown in fig. 4: Open the battery lid of the tank, install 4.8V 400mAh Battery pack with correct polarity, fasten the battery cover, and turn the power switch to "ON".
3. Put the tank horizontally on appropriate ground surface and get ready for operation.

Remote control basic operation

1 ON / OFF

(Fig 5), pressing the remote control button 6 "on / off" button to send electronic ignition, then tank start with engine idle speed sound. Please play other functions after the four life lamp completely light. Once the tank is activated, press the "on / off" button on the transmitter to turn off the tank.


2. fort barbette Turn right / left button

(Fig 6): pressing the remote control button 7/ button 8 "turn right / left button, the fort barbette to rotate right / left rotation.

3 fire button

(Fig 5): turn on the tank and then pressing the remote control button 4 "fire button", the tank with guns issued corresponding action.

(Fig 5 Fig 6): turn on the tank and then pressing the right key 7/ the left key 8 and do not release, and press the 4 "fire" button at the same time, a tank machine gun fire sound, lights shining random shots, rotating turret.

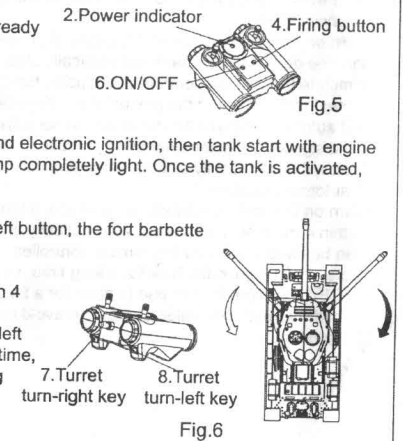

4 tank forward / backward

(Fig 7) the left handle and the right handle are pushed forward / backward at the same time. The tank can move forward / backward and a tank running sound.

5. tank rotation

(1) turn left / right forward

(Fig 8), Push ahead the left / right handle of the remote controller alone so that the tank can turn right / left forward

(2) turn left/right back

(Fig 8), Push back the left / right handle of the remote controller alone so that the tank can turn right / left back

(3) in situ rotation

(Fig 8), push ahead the left / right handle and push back the right/left handle at the same time, the tank will turn tighy/left in situ rotation.

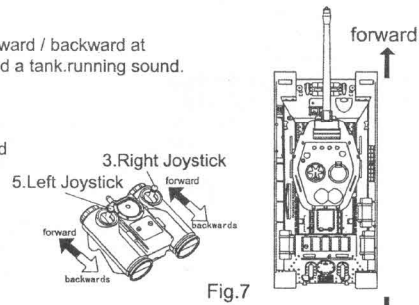


Fig.7

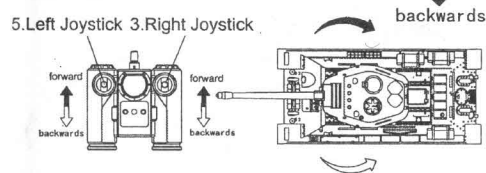


Fig.8

*****Above functions can be freely combined in actual operation*****

Advanced features

1 turn off speaker

As (Fig 9), press the 4 "fire" button and then press button 6 "on / off" button pressing, the tank will turn on silently. After the silent start, the operation of the tank same with all of the above functions, only the sound effect. Press the "on / off" button to turn off the tank, and then press the "on / off" button after five seconds, then to exit the tank off the speaker's mute state

2 function demo

Turn on the tank with sound or no sound, does not control the tank, 10 seconds into the demonstration tank automatically state. Demonstration function tanks can simulate the actual operation of the basic functions.

Note: in the course of the presentation, if the tank receives a valid signal, the tank will automatically exit the demo and perform the corresponding action of the received valid signal. In the demonstration process, if there is any other signal interference, the tank will automatically exit the demo function.

3 automatic shutdown

Turn on the tank with sound or no sound, if there is no effective signal received within 4 minutes, the tank will automatically shutdown into standby mode, standby can be used directly by the remote controller.

Note: if you no use the tank for a long time, switch the power button to "OFF" position. If you need to store for a long time, remove the battery from the remote controller and tank to avoid damage to the product.

6.ON/OFF (Press after)
4.Firing button (First press)

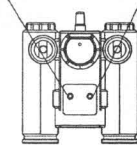


Fig.9


2.4G Fighting tank instruction manual



Battle distance is about 3 meters, enjoy real-like fighting game.

Tank battle

As shown on the right, if you have two or more battle tanks, simulation can be carried out. In actual operation, when the barrel alignment of another tank of an infrared receiving head quickly fired or machine guns, tanks were hit, it will emit a corresponding screams and the corresponding action and effect of flashing lights. Every time a cannonball is hit or hit by a machine gun 5 times, the value of the lamp will go out, until the value of the lamp is extinguished.

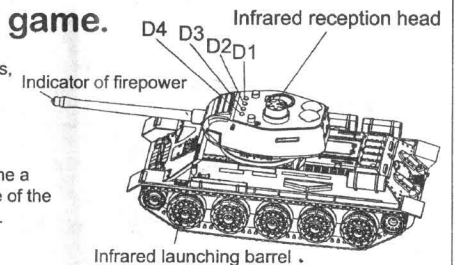


The life-force lamp


- 1.Start-up the tank and all the life-force indicator (D1.D2.D3.D4) will light up one by one, indicating that the tank is ready for battle. Make sure the lights are all on before executing other function.
- 2.One fire-head quickly fired or machine guns, tanks were hit, it will emit a corresponding screams and the corresponding action and effect of flashing lights. Every time a cannonball is hit or hit by a machine gun 5 times, the value of the lamp will go out, until the value of the lamp is extinguished.
- 3.Indicator D4 will flash after the tank is shot by barrel or machine gun; the tank won't be shot if D4 is flashing; you can shoot the tank or be shot after D4 stops flashing.
- 4.The machine gun cannot be used when D1&D2 are off.
- 5.The machine gun cannot be used and the turret won't rotate when D1.D2.D3 are off.
- 6.The tank will die after all life-force indicator(D1.D2.D3.D4) are off. (After losing the game, as the life indicators keep flashing for 30 seconds, the tank is running a renovation until the tank is turned off. To return to the game, the tank needs to be turned on again.)

USB Charger


Method①

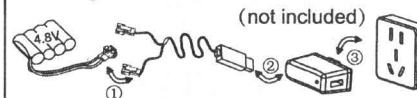


Method②

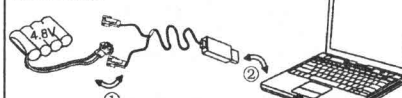

Charging adapter

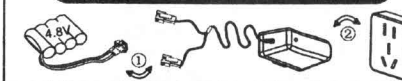

Product battery installation method

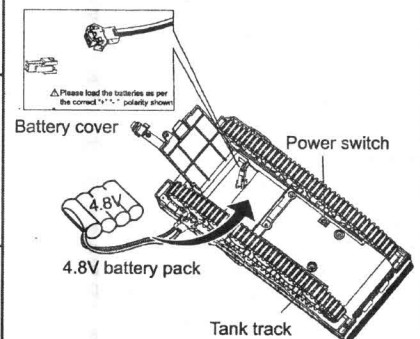

Caution: The battery pack should be charged for 8 hours for the first time and about 4-5 hours afterwards. It can be used for about 15-20 minutes. Make sure the input voltage of the charger suits your local voltage, and the output voltage of the charger suits the battery voltage. The charging icon is for reference only, and the product built-in charger type is consistent with the packaging.