



USE MANUAL

36M+


Manual contains important information and should be retained



NO.1504A



NO.1504D

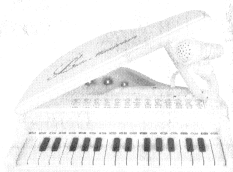


NO.1504B/NO.1504C

The specification is suitable for Item #1504A、1504B、1504C、1504D

Functions introduction:

- | | |
|-----------------------------|--|
| 1. 31 keys | 9. Light control function |
| 2. 8 percussion instruments | 10. Play function |
| 3. 3 teaching modes | 11. Record function |
| 4. 4 musical instruments | 12. Karaoke |
| 5. 4 accompaniment styles | 13. External MP3 and mobile phone |
| 6. 19 key lights | 14. 2 minutes automatic power off function |
| 7. 22 demo songs | 15. Equipped with microphone |
| 8. Colorful rhythm light | |

Introduction of the piano surface:

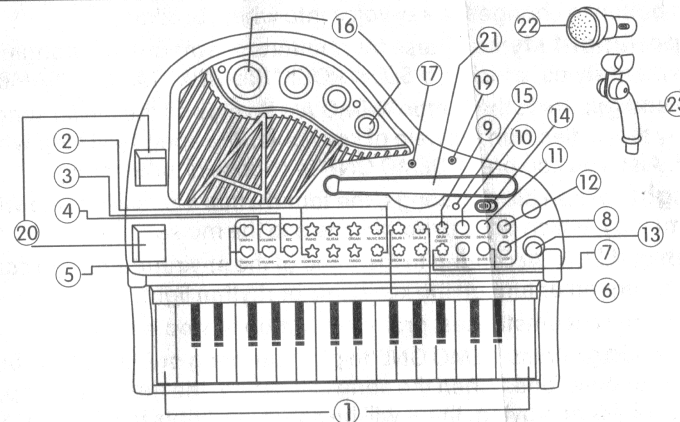

- | | | |
|---|--------------------------|---------------------------|
| 1.31 keys | 8.Stop | 15.Power light |
| 2.Piano, Guitar, Organ, Music box, Slow rock, Rumba, Tango, Samba | 9.Drum change | 16.4 lights |
| 3.Record, play | 10.Demo one | 17.Socket for MP3 |
| 4.Volume+, volume- | 11.Demo all | 19.MIC |
| 5.Tempo+, Tempo- | 12.LED | 20.Socket for piano cover |
| 6.Drum1, Drum2, Drum3, Drum4 | 13.Socket for microphone | 21.Piano cover bar |
| 7.Guide 1, Guide 2, Guide 3, | 14. On/off | 22.Microphone |
| | | 23.Microphone stand |

Detailed function:

31 black and white keys(three groups of chromatic scales): every white key with LED light.

8 percussion instruments: there are four drum buttons, and each one corresponds to one sound. You can transform them through "DRUM CHANGE" button. The other four percussion instruments have eight sound effects, including cymbal, high notes, snare drum and bass drum, which can also be transformed into kettle drum, scraper, hand bell and electronic drum.

3 teaching modes:

Button "GUIDE 1": Knock any key to play the melody.

Button "GUIDE 2": Learn to play the demonstration songs by following the lighted keys.

Button "GUIDE 3": Play a song follow the guidance of lights. Then only accompaniment will be left. Practice playing the piano according to the demo melody, and if you play it incorrectly, there will be a cue effect to remind you and you can play it again. If the demo keys are with fluent lights, that means you can learn to play another song.

4 musical instruments: There are four instruments for changing the voice of the keys, which are "PIANO" "GUITAR" "ORGAN" "MUSIC BOX". Press the instrument button to change the key voice into what you like.

4 accompaniment styles: These four buttons are meant for changing the accompaniment styles, which are "SLOW ROCK" "RUMBA" "TANGO" "SAMBA".

22 demo songs: Press the button "DEMO ALL" to play all the demo songs, and learn to play the scales with the help of key lights. The songs will stop when all are played. Also you can press "DEMO ONE" to choose another song.

Rhythm light: When playing songs, the four rhythm lights will shine with the rhythm of melody, which adds dynamic effect to the music.

Light control (LED): According to the need of the environment, you can press this button to turn on or turn off the key lights or rhythm lights.

Stop: Under any circumstances, press this button to stop all.

Play single song: Press "DEMO ONE" to play one song and press this button again to play another one. When the song is finished, the music will stop, too. During the process of playing, there will be some key lights to help you learn to play the songs.

Speed control (TEMPO+, TEMPO-): There are 16 beat speed pieces of fine tune accompaniment songs. When you turn it on, the default standard speed is from 90 to 138, and the adjustable range is from 54 to 240.

Record/ play function:

Record: Press "REC" button. At this time, you can play whichever song you like and it will record 40 music notes at most.

Play: Press "REPLAY" button to play the record music, and this function only works after recording.

Volume+, volume-: used for adjusting the volume of piano.


On: Play a piece of piano melody and all the key lights will flash in turn.

Boot dormancy: If you don't press any button for more than two minutes, it will be dormant automatically, followed by another piece of piano melody as indicator.

Off: turn on the power switch.

Battery installation diagram:

This toy is powered by four 1.5V "AA" batteries. Open the battery cover under the piano bottom and put the four batteries in it. Then cover it and screw on screw.

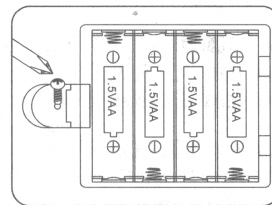

Attention: Don't place the anode and cathode wrongly when pit in the batteries!

1504A Installation Instruction:

<p>1</p> <p>Install chair according to the picture.</p>	<p>2</p> <p>Install 3 piano feet according to the picture.</p>	<p>3</p> <p>Brace up the piano cover and insert the microphone.</p>	<p>4</p> <p>Done!</p>
---	--	---	-----------------------

1504B/1504C Installation Instruction:

<p>1</p> <p>Install 3 piano feet according to the picture.</p>	<p>2</p> <p>Done!</p>	<p>3</p> <p>Brace up the piano cover and insert the microphone.</p>	<p>4</p> <p>Done!</p>
--	-----------------------	---	-----------------------

1504D Installation Instruction:

<p>1</p> <p>Install chair according to the picture.</p>	<p>2</p> <p>Install 3 piano feet according to the picture.</p>	<p>3</p> <p>Brace up the piano cover and insert the microphone.</p>	<p>4</p> <p>Done!</p>
---	--	---	-----------------------