



USE MANUAL

Manual contains important information and should be retained

3+




NO.1505A/NO.1505B

The specification is suitable for Item #1505A、1505B

Functions introduction :

- | | |
|-----------------------------|---|
| 1. 24 keys | 9. External MP3 and mobile phone |
| 2. 8 percussion instruments | 10. 2 minutes automatic power off function |
| 3. 4 musical instruments | 11. Equipped with microphone |
| 4. 22 demo songs | 12. Equipped with USB power line |
| 5. LED | (USB can be inserted into mobile phone power adapter, computer, charger and so on, which helps save battery power.) |
| 6. Play function | |
| 7. Record function | |
| 8. Karaoke | |

Introduction of the piano surface:

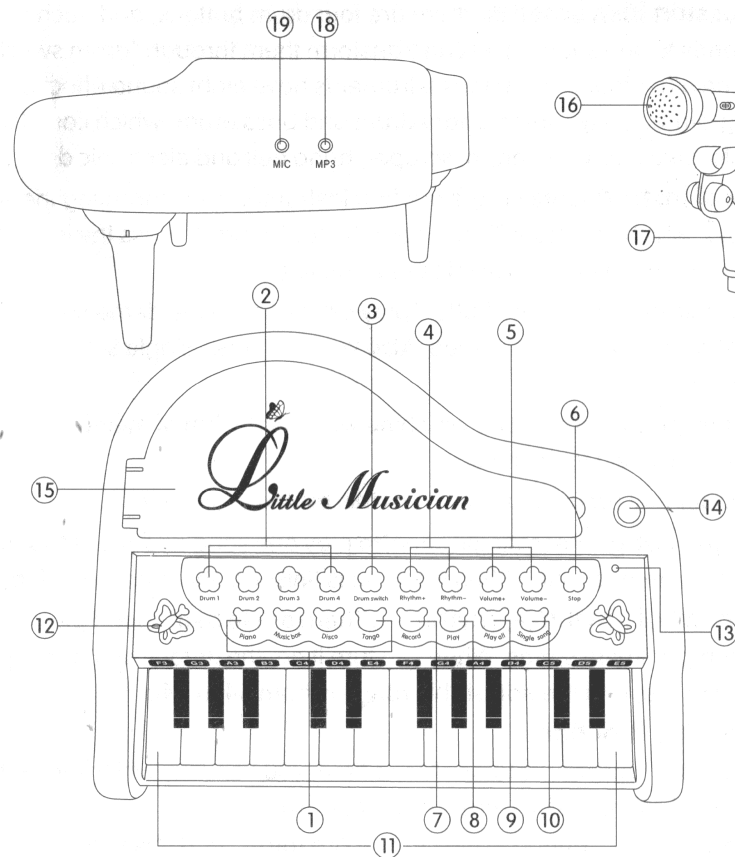

- | | | |
|-----------------------------------|-----------------|---------------------------|
| 1. Piano, music box, disco, tango | 7. Record | 13. Power light |
| 2. Drum1, Drum2, Drum3, Drum4 | 8. play | 14. Socket for microphone |
| 3. Drum switch | 9. play all | 15. Piano cover |
| 4. Rhythm+, rhythm- | 10. single song | 16. microphone |
| 5. Volume+, volume- | 11. 24keys | 17. Microphone stand |
| 6. stop | 12. LED | 18. Socket for Mp3 |
| | | 19. MIC |

Detailed function:

8 percussion instruments: there are four drum buttons, and each one corresponds to one sound. You can transform them through "drum switch" button. The other four percussion instruments have eight sound effects, including cymbal, high notes, snare drum and bass drum, which can also be transformed into kettle drum, scraper, hand bell and electronic drum.

4 musical instruments: There are four instruments for changing the voice of the keys, which are "piano" "music box" "disco" "tango". Press the instrument button to change the key voice into what you like.

22 demo songs: Press the button "play all" to play all the demo songs. The songs will stop when all are played. Also you can press "single song" to choose another song.

LED: When playing songs, LED will shine with the rhythm of melody, which adds dynamic effect to the music.

Stop: Under any circumstances, press this button to stop all.

Play single song: Press "single song" to play one song and press this button again to play another one. When the song is finished, the music will stop, too.

Speed control (rhythm+, rhythm-): There are 16 beat speed pieces of fine tune accompaniment songs. When you turn it on, the default standard speed is from 90 to 138, and the adjustable range is from 54 to 240.

Record/ play function:

Record: Press "record" button. At this time, you can play whichever song you like and it will record 40 music notes at most.

Play: Press "play" button to play the record music, and this function only works after recording.




Volume+, volume-: used for adjusting the volume of piano.

On: Play a piece of piano melody and all the key lights will flash in turn.

Boot dormancy: If you don't press any button for more than two minutes, it will be dormant automatically, followed by another piece of piano melody as indicator.

Off: turn on the power switch.


1505A/1505B Installation Instruction :

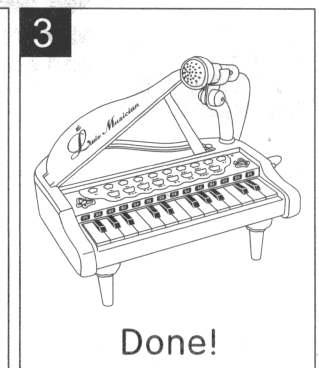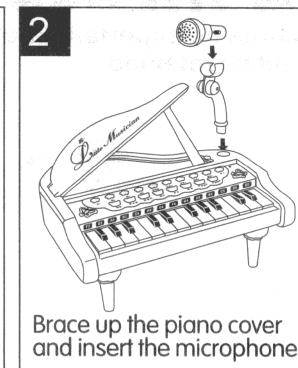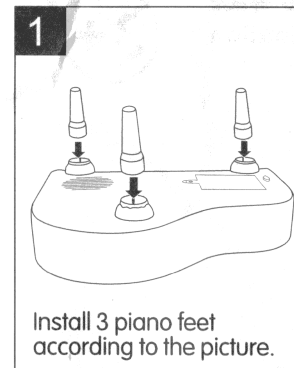

Battery installation diagram:

This toy is powered by 4 1.5V "AA" batteries. Open the battery cover under the piano bottom and put the four batteries in it. Then cover it and screw on screw.

Attention: Don't place the anode and cathode wrongly when put in the batteries!

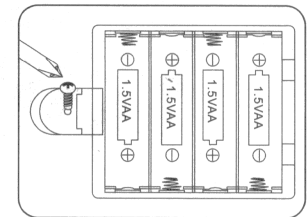

Maintenance

1. Don't use the different types batteries at the same time, or use the new ones with the old ones together.
2. Please notice the place of anode and cathode when put in the batteries, and don't place them wrongly or loosely.
3. Don't let the child touch batteries, in case that they swallow them mistakenly and harm their health.
4. Don't reverse the anode and cathode, in case that they will get hot or even explode.
5. If you don't use the toy for a long time, please take the batteries out and put them in a safe place.
6. If you find out something wrong with this toy, please don't take them down by yourself. Please ask the professional to help fix it and the toy should be installed by adults.