




User Manual for Multifunctional Jump Starter

UNIT INPUT/OUTPUT CONFIGURATION(ILLUSTRATION):

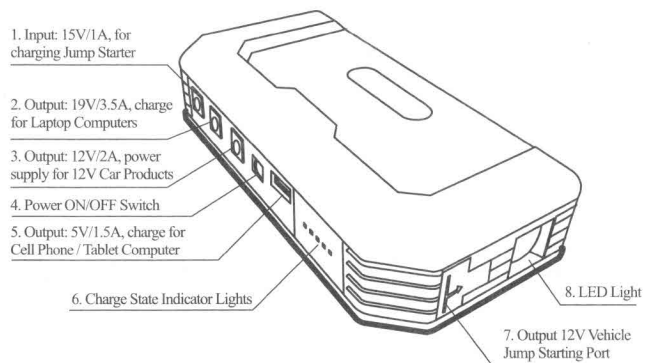

Technical Specification:

Dimension: 39 x 84 x 172 mm (1.5 x 3.3 x 6.75 inches)

Weight: 500 g

Capacity: 12,000 mAh

Input: DC 15V / 1A

Output: DC 5~19V / 1.5~400A

Unit Charging Time: Approx. 4 hours

Start Current: 200A

Peak Current: 400A

Operating Temperature Range: -20 to +60°C

Life Time: \geq 1000 cycles

Charge State Indicator Lights:

Press the Power Switch (#4 in illustration), the Indicator Lights will be shown as below:

Indicator Lights	No Lights	One Light Flashing	One Lights	Two Lights	Three Lights	Four Lights	Five Lights
Power	0%	5%	20%	40%	60%	80%	100%

During the unit's charging process, each indicator light will be flashing and then light up one by one, when all the 5 indicators light up, charging is complete (100% full).

OPERATING INSTRUCTION

Charging the Jump Starter:

- Option 1 AC source: Plug the specified Wall Charger into an AC socket.
 - Option 2 DC source: Plug the specified Car Charger into the Cigarette Lighter.
- Connect the AC or DC Charging Plug into the Input Port 15V / 1A (#1 in illustration).
 - Charging is complete when all 5 indicator lights are fully lit.

Jump Starting Vehicles:

- Make sure 3 or more indicator lights are fully lit before jump starting.
- Connect the Red Clamp to the Positive (+) terminal of the Vehicle Battery, and then connect the Black Clamp to the Negative (-) terminal of the Vehicle Battery.
- Connect the Blue EC5 Connector to the 12V Jump Start Port (#7 in illustration).
- Start the vehicle.
- After the vehicle is started, unplug the Blue EC5 Connector immediately.
- Remove the Red and Black Clamp from the Vehicle Battery.

Charging Cell Phones / Tablet Computers:

- Choose the correct plug on the supplied USB multi connector cable to connect to the Cell Phone / Tablet Computer.
- Connect the USB side of the cable to the Output Port 5V / 1.5A (#5 in illustration).
- Press the Power Switch (#4 in illustration), start charging for Cell Phone / Tablet Computer.

Power Supply for 12V Car Products:

- Choose the correct connector with conversion cable to connect the 12V Car Products.
- Connect the DC Plug to the Output Port 12V / 2A (#3 in illustration).
- Press the Power Switch (#4 in illustration), start supplying power for Car Products.

Charging Laptop Computers:

- Choose the correct connector to connect the supplied conversion cable and then connect with the Laptop.
- Connect the DC Plug to the Output Port 19V / 3.5A (#2 in illustration).
- Briefly press the Power Switch (#4 in illustration) one time, release and then press and hold for 5 seconds, start charging for Laptop.

Multi Mode LED Light Operation:

- Quickly press the Power Switch (#4 in illustration) twice to turn on the LED Light (Normal).
- Continue to quickly press Power Switch 1 time for flashing "SOS" (Morse code flash pattern).
- Continue to quickly press Power Switch 1 time for rapid flashing LED light.
- Continue to quickly press Power Switch 1 time will change back to Normal.
- Quickly press the Power Switch twice to turn off the LED Light.

Warranty Coverage:

The warranty period is 6 months from the date of purchase. We guarantee to repair or replace the product for failures due to manufacturing process. This warranty does not cover misuse, abuse or damage caused by the customer.

Caution:

- Follow the instructions when jump starting any vehicle.
- Never try to jump start a vehicle when the unit shows less than 3 indicator lights on the charge state display.
- After the vehicle is started, disconnect the Jump Starter from the vehicle Battery quickly (within 10 seconds).
- The output ports 5V / 12V / 19V can not be used at the same time.
- Only use the supplied charger when re-charging your Jump Starter.
- The Temperature Range for charging the Jump Starter is 0~40°C.
- DO NOT store the Jump Starter in more than 60°C High-Temp ambient.
- DO NOT immerse the Jump Starter into the water or use in the humid environment, such as bathroom etc.
- DO NOT disassemble the Jump Starter and replace the battery.
- DO NOT joint the Red and Black Clamp together after connecting with Jump Starter.
- DO NOT dispose the Jump Starter to the fire.
- DO NOT drop, strike or throw the Jump Starter.
- If there is liquid from the Jump Starter splash into the eyes, please wash with clean water immediately and seek medical attention.

Contents List:

No.	Accessories	Qty
1	Jump Starter	1
2	USB Connection Cable for Cell Phone	1
3	Conversion Cable for Laptop	1
4	Conversion Connectors for Laptop	10
5	AC Wall Charger	1
6	DC Car Charger	1
7	Vehicle Jump Starting Cable with Clamps	1
8	Kit Bag	1
9	User Manual	1