

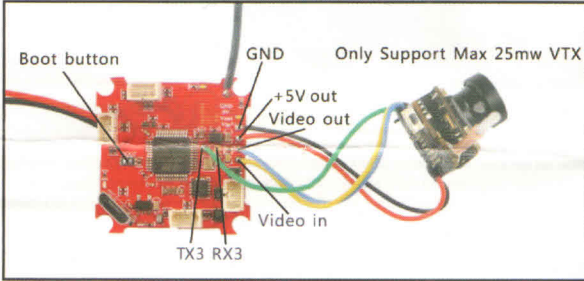
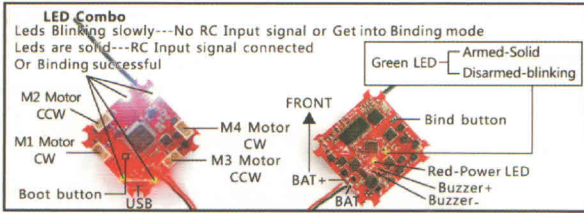



Flight controller connection diagram

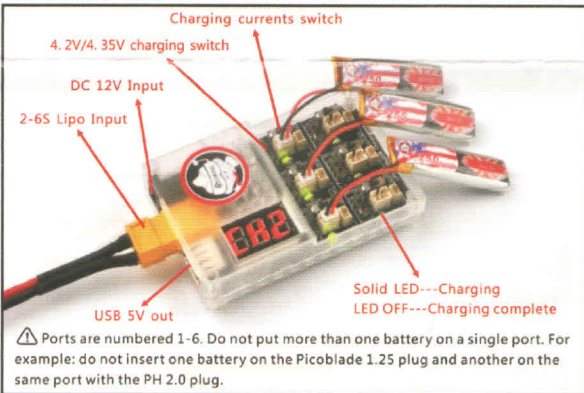

Charger the Lipo Battery

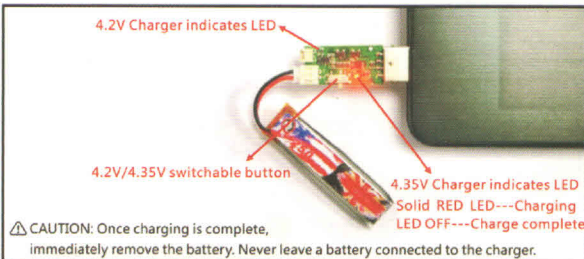

Mixer type and ESC/motor protocol

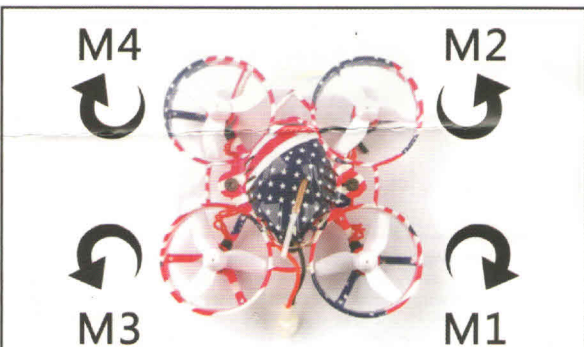

Fix the CW propellers onto the M1 and M4 motor (CW motors)
Fix the CCW propeller onto the M2 and M3 motor (CCW motors)

ESC/Motor Features

DSHOT600 ESC/Motor protocol

MOTOR_STOP Don't spin the motors when armed


Disarm motors regardless of throttle value (When ARM is configured in Modes tab via AUX channel)

5 Disarm motors after set delay (seconds) (Requires MOTOR_STOP feature)


45 Motor Idle Throttle Value (percent)

ESC Check and Flash firmware


- 1.Download New release Bhlhelisuite from:
<https://www.mediafire.com/folder/dx6kfaasyo24l/BLHeliSuite>
- 2.Connect the CRAZYBEE flight controller to computer and power for it with 1S Lipo battery

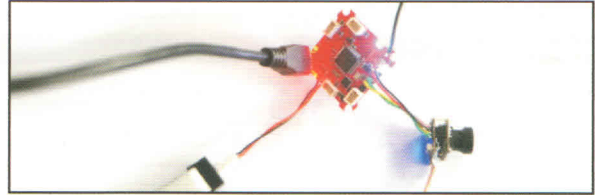

- 3.Open the Device Manager of your computer, find the Ports, please make sure the Com port Serial Number is under 255, otherwise it will can't connect to the BLHELISUITE. You can change the port serial number like the following step :

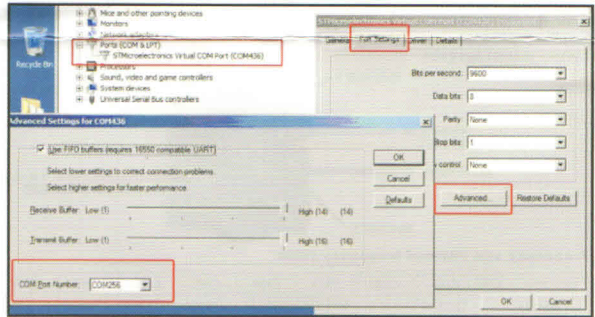

- 4.Open the BLHELISUITE, Select SILABS BLHeli Bootloader (Cleanflight) from the third tab on the top side. Then Select the right Serial com port and Click connect. You can also Flash the new release BLHeli_s firmware via the BLHELISUITE, the firmware Target is "O-L-05"

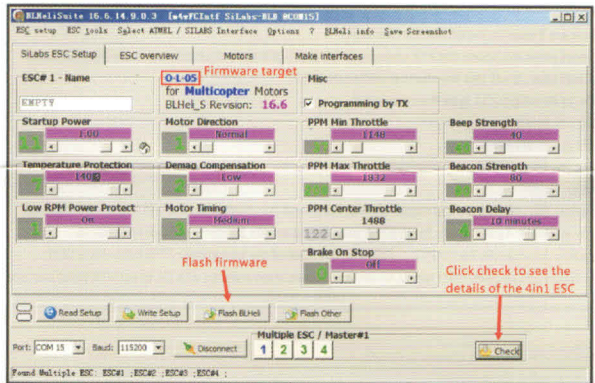

Flight controller firmware update


- 1.Install latest STM32 Virtual COM Port Driver
<http://www.st.com/web/en/catalog/tools/PF257938>
- 2.Install STM BOOTLOAD Driver (STM Device in DFU MODE)
- 3.Open Betaflight configurator and choose firmware target "Crazybeef3F5", then select the firmware version.
- 4.There are 2 ways to get in DFU Mode: 1). solder the boot pad and then plug USB to computer 2). loading betafight firmware and hit "flash", then it will getting into DFU Mode automatically.
- 5.Open Zadig tools to replace the drivers from STM32 Bootloader to WINUSB Driver.
- 6.Reconnect the flight controller to the computer after replace driver done , and open Betaflight Configurator, loading firmware and flash.



*We will update the firmware for Crazybee F3 and release to our website in time.

"Flip over after crash" procedure

Set one channel of your radio transmitter to activate the Flip over function in the Mode tab of Betaflight configurator.



Notes:

- The receiver signal will be unstable while the MSP(Connect to Betaflight) Connection established
- The PID loop frequency must be 2kHz at this firmware version, will update soon.

8 kHz	Gyro update frequency
2 kHz	PID loop frequency

Specifications

Brand Name: EACHINE
Mode Name: US65/UK65
Item Name: 1S Brushless Whoop racer drone BNF
Wheelbase: 65mm
Size: 81mm*81mm*36mm
Weight: 21g(without battery)

VTX Bands and Channels setup

Blue LED1 and Red LED1 light on, indicating frequency 5865MHZ(BAND1 and CH1)
 Blue LED1 and Red LED2 light on, indicating frequency 5845MHZ(BAND1 and CH2)

Frequency and channel frequency table:

FR	CH	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Band1		5865M	5845M	5825M	5805M	5785M	5765M	5745M	5725M
Band2		5733M	5752M	5771M	5790M	5809M	5828M	5847M	5866M
Band3		5705M	5685M	5665M	5665M	5885M	5905M	5905M	5905M
Band4		5740M	5760M	5780M	5800M	5820M	5840M	5860M	5880M
Band5		5658M	5695M	5732M	5769M	5806M	5843M	5880M	5917M

There are 3 ways to switch the vtx channels:


- Short press to choose the VTX channel, press and holding the button to choose the VTX Band (Can't save, it will lost the channel while power off)
- Go to Betaflight CLI, type the command:
 Set vtx_band=3
 Set vtx_channel=1
 Set vtx_freq=5705
 save
 Notes: The vtx_freq should match the vtx_band and vtx_channel as the VTX Channel list shows. For example, if you set vtx_freq=5732, you should set vtx_band=5 and vtx_channel=3
- Enable Smartaudio for UART3, then move the stick of the transmitter (THR MID+YAW LEFT + PITCH UP) to enter OSD Menu, Enter to Features, then enter to VTX SA to set VTX Band and channel

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	115200	Disabled	AUTO	Disabled	AUTO
UART3	115200	Disabled	AUTO	Disabled	AUTO




Binding procedure

1. Power for the US65/UK65 or connect the USB to computer while holding the bind button, the LED Combo(2 red led and 2 white LED) will blinking fast, this indicate the Crazybee F3 Flight controller flysky version is in binding mode and then release the bind button

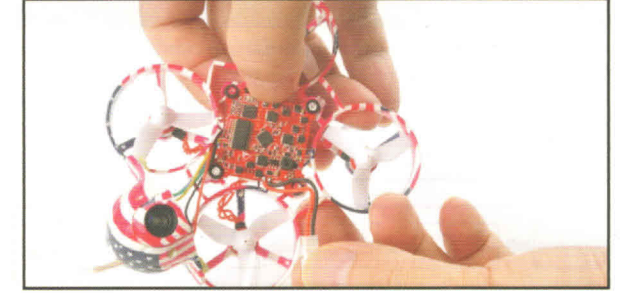

2. Turn on your Flysky transmitter, and Choose receiver mode AFHDS-2A or AFHDS according to your Betaflight receiver configuration(A7105_Flysky_2A=AFHDS-2A, A7105_Flysky=AFHDS)
 3. ENT RX [BIND] to binding with the Crazybee Flight controller, the LED Combo(2 red led and 2 white led) will getting to be solid on the flight controller, this indicate binding successfully, the AFHDS-2A radio will auto exist the binding mode but the AFHDS radio should exist binding mode by yourself.

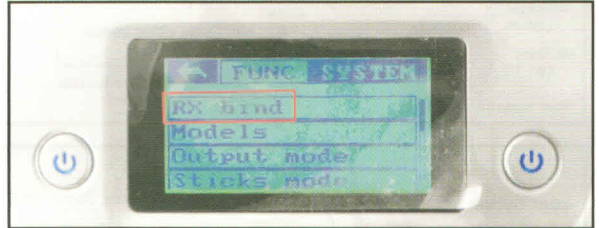

Receiver configuration

Please set Receiver mode to be SPI RX Support from the Configuration tab of the Betaflight Configurator, then select A7105_Flysky_2A Provider for AFHDS-2A Protocol Radio transmitter or Select A7105_Flysky Provider for AFHDS Protocol Radio transmitter, don't enable Serial RX since the CRAZYBEE Flight controller is integrated SPI BUS Receiver

Arm/Disarm the Motor

1. The Default Arm/Disarm switch for US65/UK65 is AUX1(Channel 5), and you can also customize it with Betaflight Configurator.

2. Set Arm/Disarm switch for your Flysky Radio: Move to the Aux.channels interface, Set "SWA" or "SWB" or "SWC" switch etc. for Ch5 to ARM/DISARM the motor.



3. The default channel map for US65/UK65 Flysky version is AETR1234, please make sure your transmitter is matched, otherwise it will can't be armed. Toggle the AUX1 Switch, the Green LED on the flight controller will getting to be solid, this indicates the US65/UK65 was armed. And also you can found "Armed" displayed on your FPV Goggles or the FPV Monitor. Please make sure keep the US65/UK65 level before arming. Be careful and enjoy your flight now!

